



Pump Performance Testing

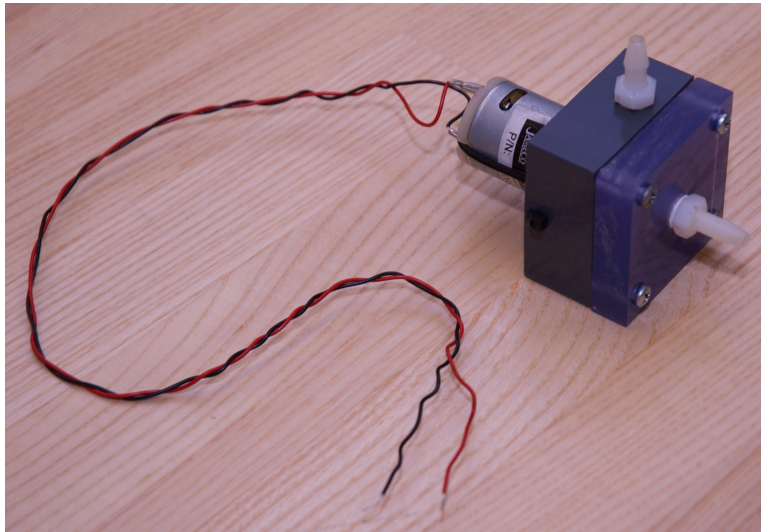


© 2011 LWTL Faculty Team

Goal: Measure the pump curve(s)

Head versus flow rate:

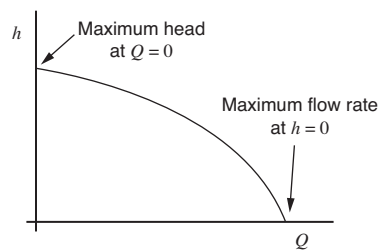

Efficiency versus flow rate:

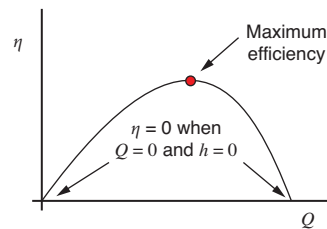

© 2011 LWTL Faculty Team

Pump testing in a nutshell

Prep


1. Make sure the pump works: dry and wet tests.
2. Wire the circuit to measure voltage and current.
3. Configure tubing for the pump test.

Data Collection

Change height of exit tube. Record mass flow rate, voltage and current.

Make sure the pump works:
Dry and wet tests.

Dry Test: Make sure the impeller spins

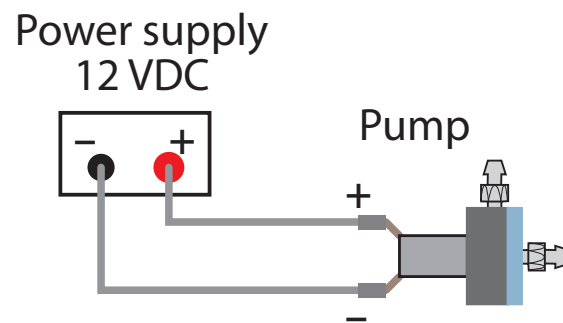


Don't run your pump too long without water. The purpose of the dry test is to verify that the motor works and that the impeller can rotate freely.

© 2011 LWTL Faculty Team

Debugging the dry test


If the impeller does not spin:

- Is the lid so tight that impeller rubs? If so, loosen the screws holding the lid in place.
- Is the motor misaligned? Try wiggling it.
- Is the current limit on the power supply exceeded? Increase the current dial.
- Are the electrical leads making good contact?

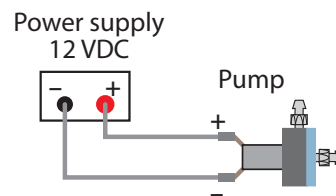

© 2011 LWTL Faculty Team

Wet Test: Make sure the pump can move water.

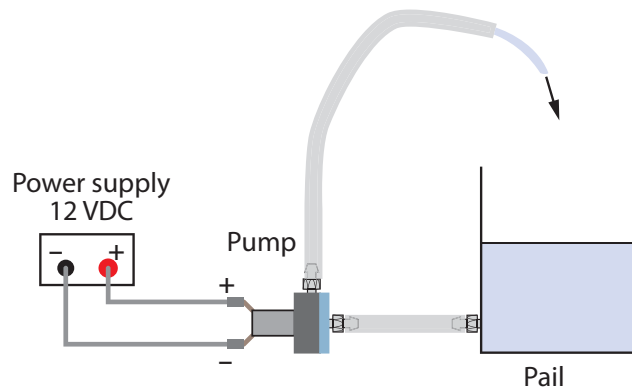

© 2011 LWTL Faculty Team

SAFETY

- Keep water away from all electrical equipment except the pump, and do your best to keep the pump motor dry.
- Don't handle the power supply or multimeter(s) with wet hands or wet feet (or when in contact with water).
- Prevent water from splashing onto or near the power supply.
- Wipe up any water that leaks onto the floor.
- Report any problems encountered to your instructor.


© 2011 LWTL Faculty Team

8

Priming the pump

Priming is the addition of water to the pump cavity so that the impeller can create enough suction to pull water from the supply reservoir.


Use gravity feed from the supply pail to cause water to flow into the pump cavity.

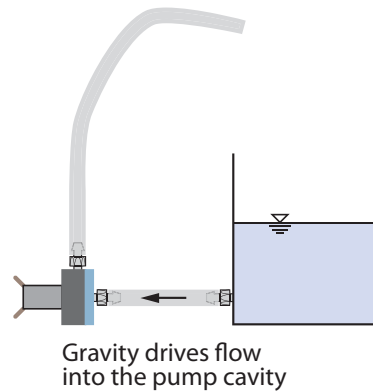

© 2011 LWTL Faculty Team

Priming the pump


1. Connect the outlet tube first.

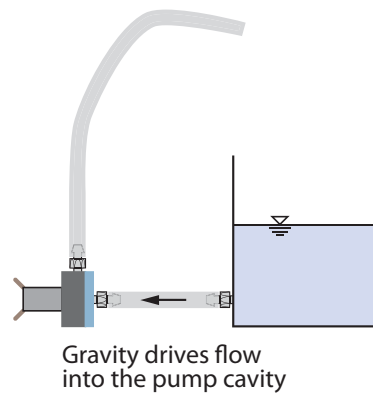

© 2011 LWTL Faculty Team

Priming the pump


1. Connect the outlet tube first.
2. Connect the inlet tube from the supply pail.

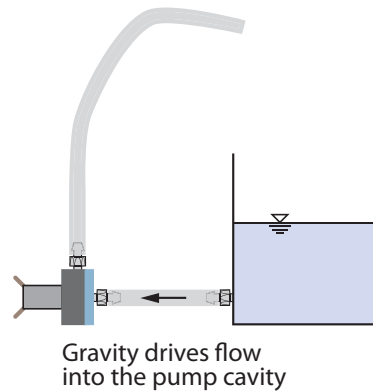

© 2011 LWTL Faculty Team

Priming the pump


1. Connect the outlet tube first.
2. Connect the inlet tube from the supply pail.
3. Allow water to flow into the pump cavity.

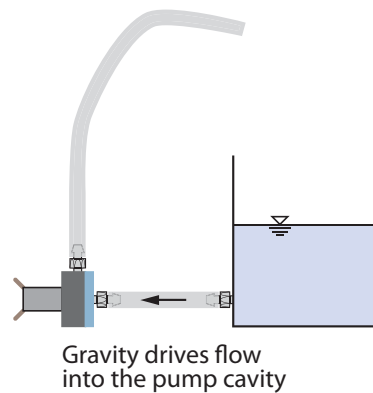

© 2011 LWTL Faculty Team

Priming the pump

1. Connect the outlet tube first.
2. Connect the inlet tube from the supply pail.
3. Allow water to flow into the pump cavity.
4. Connect the power to the pump.

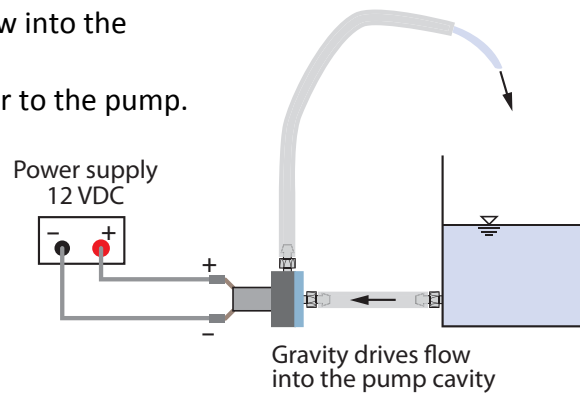


© 2011 LWTL Faculty Team

Debugging the wet test

If water is not flowing:

- Are there bubbles in the line between the pail and the pump? If so, tap the lines to move the bubbles.
- Is there water in the pump cavity? If not, make sure the inlet is below the surface of the water in the supply pail.

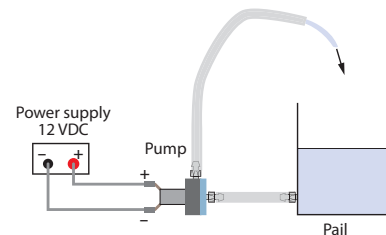


© 2011 LWTL Faculty Team

Set up the electrical circuit
for measuring pump voltage
and pump current.

Electrical circuit for pump power measurement

Use your DMM to
measure voltage

Use the bench-top DMM
to measure current

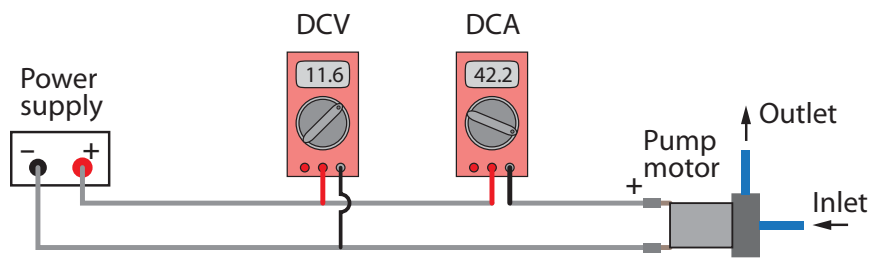


Can you make the connections?

Use the DMM on top of the power supply to measure current.




© 2011 LWTL Faculty Team

To measure current, the current must flow *through* the DMM.

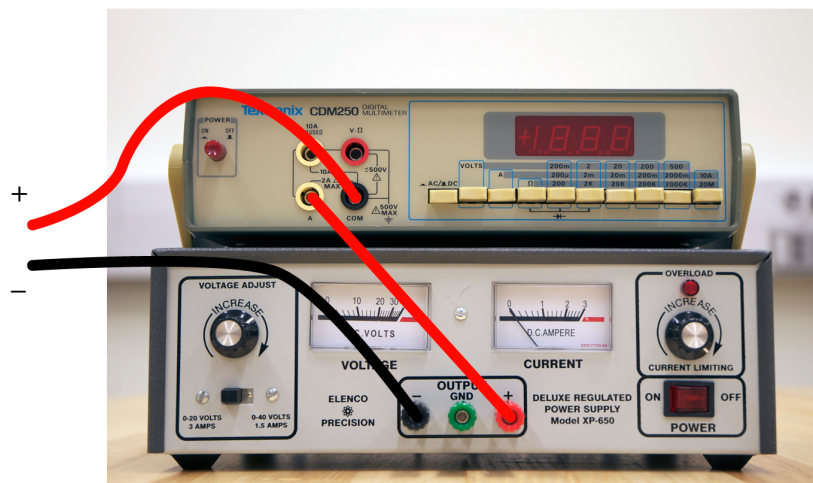

© 2011 LWTL Faculty Team

To measure current, the current must flow *through* the DMM, and the settings must be correct.

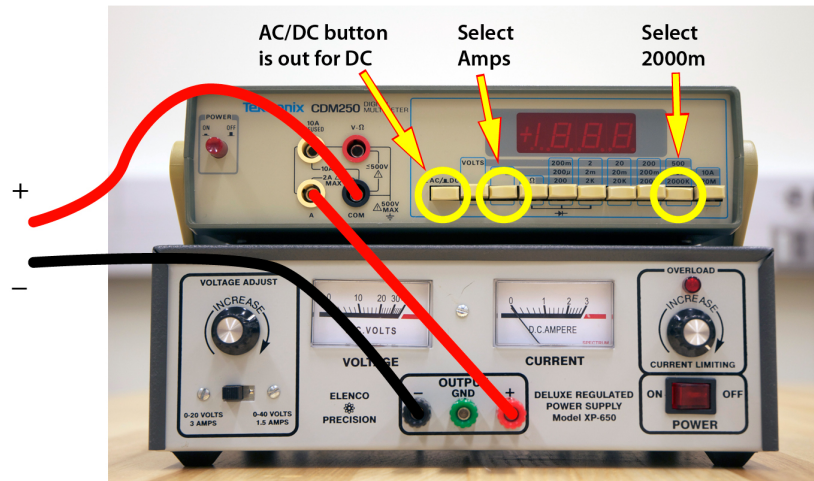

© 2011 LWTL Faculty Team

SAFETY


- Keep water away from all electrical equipment except the pump, and do your best to keep the pump motor dry.
- Don't handle the power supply or multimeter(s) with wet hands or wet feet (or when in contact with water).
- Prevent water from splashing onto or near the power supply.
- Wipe up any water that leaks onto the floor.
- Report any problems encountered to your instructor.

© 2011 LWTL Faculty Team

20

Configure the tubing for measuring the pump curve.

Configure the tubing for measuring the pump curve

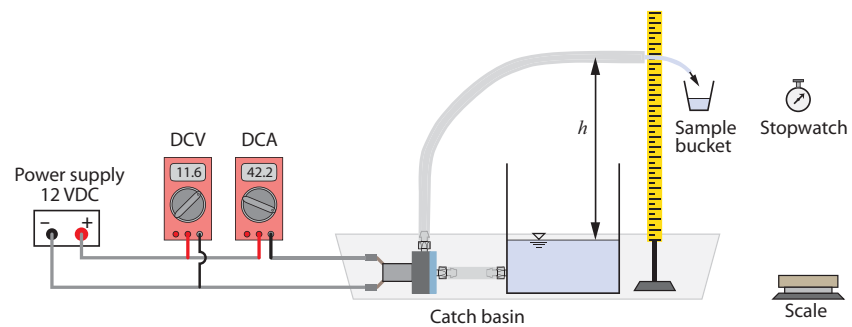

NOTE: h is the distance from outlet of the hose to the free surface in the pail.

Preliminary Procedure


1. Fill the supply pail to about one-third of full.
2. Align the vertical scale to the water level in the bucket.
3. Set the tare weight of the small bucket.
4. Hook pump to the supply pail and exit tube.

Align the vertical scale to the level of the water surface in the bucket

Adjustment screws



Align the vertical scale to the level of the water surface in the bucket

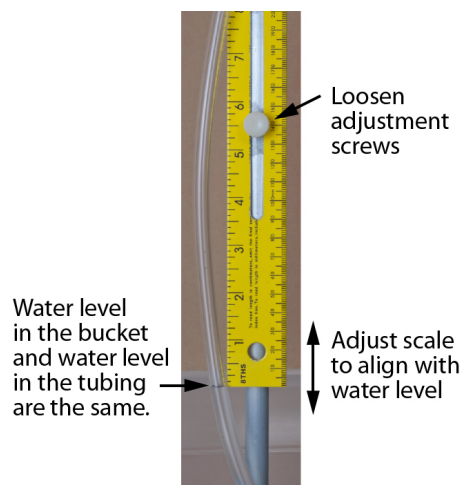

© 2011 LWTL Faculty Team

Use the tare function to cancel the dry weight of the pitcher used to collect water samples.



Empty pitcher on the scales



Before clicking "zero"



After clicking "zero"

© 2011 LWTL Faculty Team

Collecting Data: Basic Ideas

1. You choose h , then measure V , I , Δm and Δt
2. Allow Δt of at least 15 seconds. Use longer times at low flow rates.
3. Use strategic selection of the order of h
 - First measure at the extremes: Find the maximum h first.
 - Fill in the middle of the range in random order
4. Use multimeters to measure V and I .
Do not trust the meters on the power supply

Collecting Data: Basic Ideas (2)

5. Do not make physical changes (e.g. changing impellers) during a single data set. If you make changes, start over, but keep your data.
6. Do not throw away data. Make notes about suspicious data. Discard measurements only at the analysis stage when you are certain that the data is not valid.

Data Collection Procedure

Note: Keep the pump running during these measurements.

1. Empty the collection bucket.
2. Move the exit hose to a selected height
 - Water jet should exit the hose horizontally
3. Start the timer as the collection bucket is moved to capture the water
4. Collect “enough” water
5. Record h , Δm , Δt , V and I
6. Repeat for at least 10 settings (10 h values).


© 2011 LWTL Faculty Team

Exit tube should be horizontal

Like this:



Not like this:

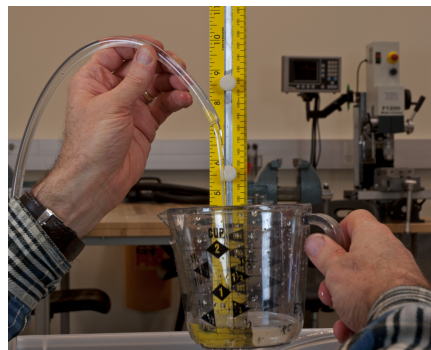

© 2011 LWTL Faculty Team

Data sheet

- Label the sheet with team members, date, type of impeller (if more than one is used)
- Make columns of data for h , V , I , Δm , Δt .

h (inch)	V (volts)	I (amp)	Δm (g)	Δt (s)

This is just a sample data sheet. Make your own version on a full sheet of paper. Be prepared to take more data than you will eventually use.


© 2011 LWTL Faculty Team

Strategic data collection.


© 2011 LWTL Faculty Team

Naive data collection

There is no need to use equal spacing of h values.

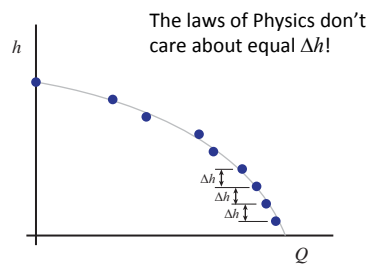


There is no need to collect data in order of increasing or decreasing h . In fact, it's a bad idea

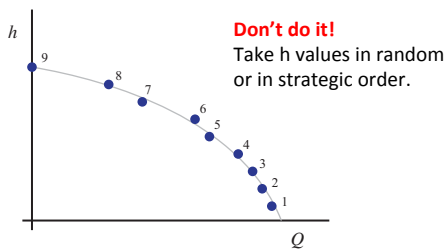

© 2011 LWTL Faculty Team

Strategic data collection

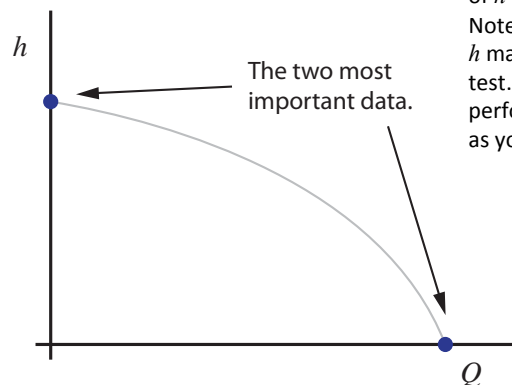


First, establish the range of h for your pump. Note that the maximum h may change during the test. Your pump performance will change as you run your pump.

© 2011 LWTL Faculty Team

Strategic data collection


The middle value of h determines the curvature of the data set

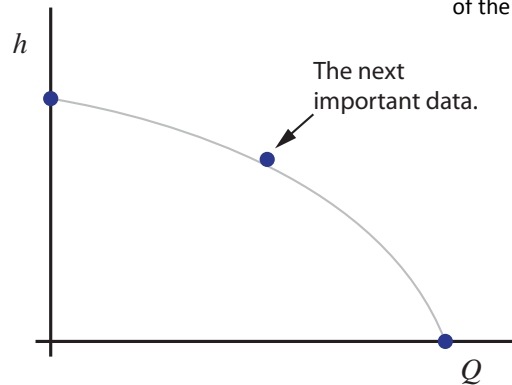

© 2011 LWTL Faculty Team


Strategic data collection

Fill in remainder of data in random order of h values in the range between minimum and maximum h .

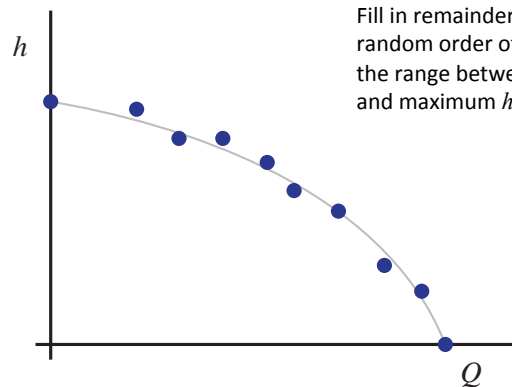

© 2011 LWTL Faculty Team



Strategic data collection

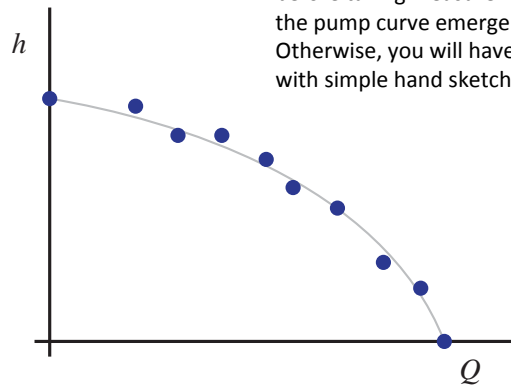

If the data reduction spreadsheet is created before taking measurements, you can see the pump curve emerge as data is collected. Otherwise, you will have to visualize the data with simple hand sketches.

© 2011 LWTL Faculty Team

Sample results

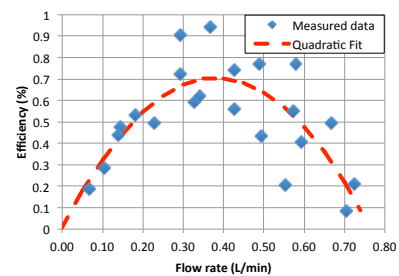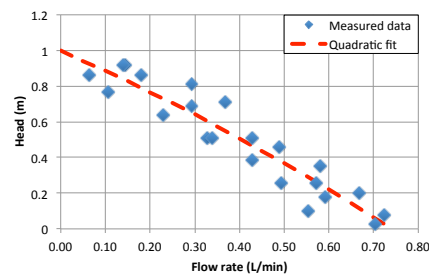

© 2011 LWTL Faculty Team