

# ASIC Design Methodology Primer

---

## Abstract

This application note provides an overview of the application-specific integrated circuit (ASIC) design process. Four major phases are discussed: design entry and analysis; technology optimization and floor-planning; design verification; and layout.

## Introduction

The *ASIC Design Methodology Primer* provides an overview of the steps involved in application specific integrated circuit (ASIC) design. An ASIC is a collection of logic and memory circuits on a single silicon die. ASICs are used in a wide variety of products ranging from consumer products such as video games, digital cameras, automobiles and personal computers, to high-end technology products such as workstations and supercomputers. The ASIC market, with steady growth over the past decade and continued growth predicted for the next one, is expected to become a \$50 billion market by the year 2000 (*Dataquest*, 12/16/96).

This primer is organized into three sections:

- The first section, **Basic Terminology**, defines key terms and the scope of this paper.
- The second and largest section, **Basic Methodology Walkthrough**, covers, at a high level, the four major phases of ASIC design, and is illustrated with real design examples. This discussion also identifies some of the major software vendors who offer ASIC design tools, and lists any process steps unique to IBM.
- The last section, **Design Challenges and Strategies** summarizes the specific strengths and capabilities IBM ASICs brings to the marketplace, and their resulting value to its customers.

## Basic Terminology

ASICs are logic chips designed by the end-customers to perform a specific function and thereby meet the specific needs of their application. Customers implement their designs in a single silicon die by mapping their functions to a set of predesigned, preverified logic circuits provided by the ASIC vendor. These circuits are referred to as the ASIC vendor's **library**, and are described in the ASIC vendor's **databook**. These circuits range from the simplest functions, such as inverters, NANDs and NORs, flip-flops and latches, to more complex structures such as static memory arrays, adders, counters and phase-lock loops. Recently vendors have added some highly complex circuits to their ASIC libraries, such as micro-processors, Ethernet<sup>®</sup> functions, and peripheral component interconnect (PCI) controllers. These complex designs are referred to as **cores** and are fast becoming a major differentiator among ASIC vendors.

## ASIC Vendor Selection Criteria

An ASIC designer, seeking to create a new design and select an appropriate ASIC vendor, should consider the following criteria:

- ASIC library content and characteristics:
  - Does the library contain the logic circuits needed to implement the design? Are the circuits fast enough? How many can fit on a single die?

## ASIC Design Methodology Primer

---

- Design turn-around-time (TAT):
  - How long does the ASIC vendor take to fabricate, package, and test the part once the design is completed?
- Price of the die:
  - How much does the ASIC cost?  
This is an important factor to all designers, but is more crucial to some customers than others. Those in the consumer market may have this as their number one criteria when evaluating an ASIC vendor, whereas a high-end workstation customer may put performance or function ahead of price.
- Power consumption:
  - How much power does the ASIC consume?  
The importance of power utilization has greatly increased over the past several years, and surpasses the importance of cost in some cases, such as in battery-powered applications like cell phones and lap-top computers.
- Miscellaneous aspects:
  - Packaging options, reliability, supply assurance and second-source capabilities are absolutely critical to some customers, and of secondary importance to others.
- Design methodology.
  - Design methodology is the process that a designer must follow to implement a design in an ASIC vendor's library. The ease with which a designer can execute this process can affect time-to-market, design verification and reliability, and the cost of the overall design process. It is this aspect of the ASIC product, **design methodology**, that is the focus of this primer. This criteria is of importance to all ASIC customers.

### Design Views

During the course of the design process, the design data exists in several different formats or views. As the design progresses, it becomes less abstract and more specific to, and optimized for, a particular technology. Each step in the design methodology serves a different purpose and requires unique tools. These views evolve through three major phases:

- In the initial phase the design is realized primarily as a technology-independent Hardware Description Language (HDL), a format very similar to a programming language, to describe the design's functionality.
- In the second phase the design is realized as a technology-dependent netlist that consists of a series of instances of circuits from the ASIC vendor's library, interconnected in a manner to implement the functionality described in the previous view.
- In the last phase the design is realized as a physical view, in which the logic circuits described in the previous view are physically placed on a piece of silicon, called a die, and interconnected by various layers of wiring.

Figure 1 on page 3 depicts these three design views.

## ASIC Design Methodology Primer

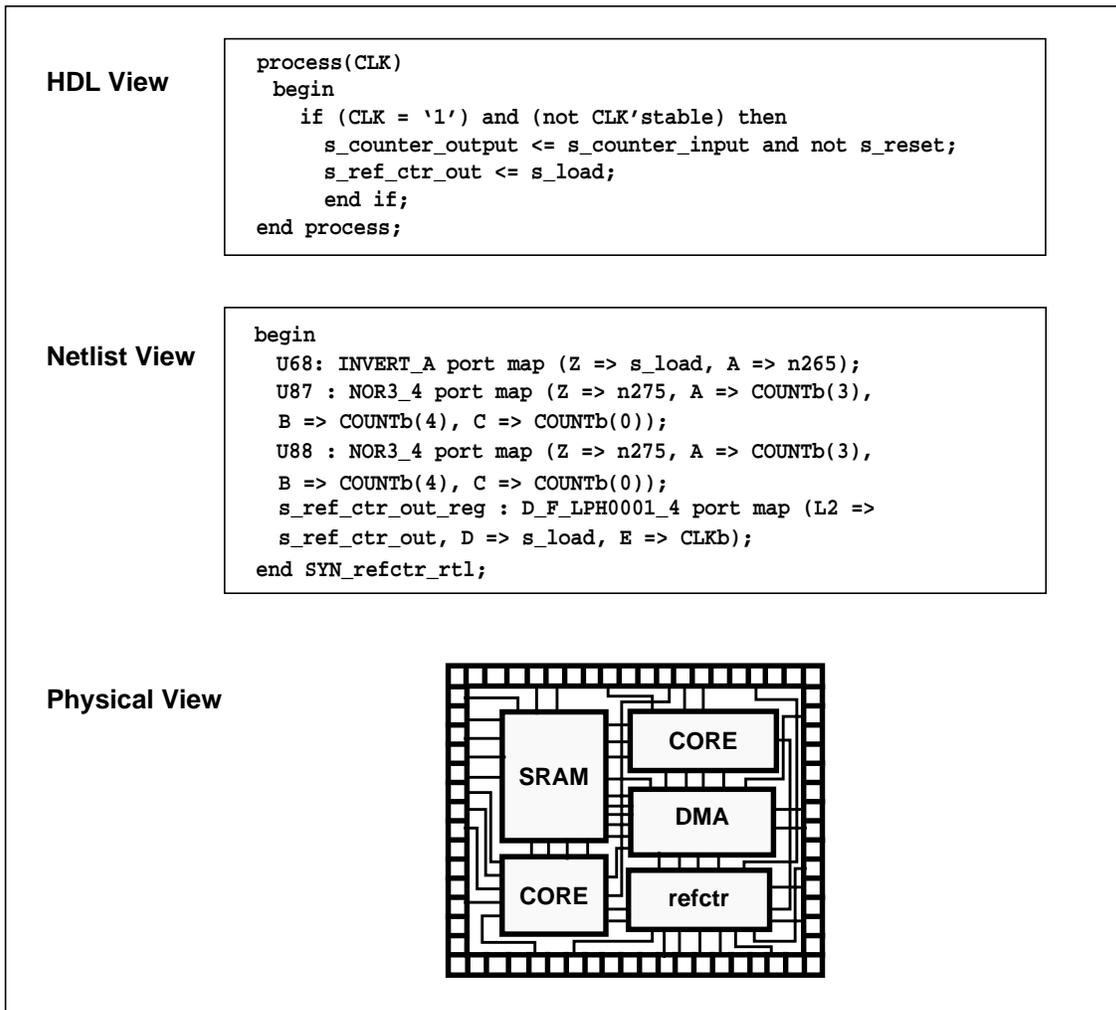


Figure 1. Design Views

### Basic Methodology Walkthrough

There are four basic steps that an ASIC design must go through in order to create working silicon:

1. design entry and analysis
2. technology optimization and floorplanning
3. design verification
4. layout

### Design Entry

The designer's first task is to describe the design's intended function. Typically this functionality is specified in a document, such as a functional specification, written in a natural language such as English in order to facilitate its development as well as to make it accessible for review by all project team members. Once the specification is finalized, the designer then translates the specification into a form that can be

## ASIC Design Methodology Primer

---

understood by software tools in order to direct the creation of silicon. The two principal design description methods are:

- Hardware Description Languages (HDLs), generally used for designs of 50 thousand gates or more; and,
- Schematic Capture, an older method, suitable only for sub-50k gate designs and generally less often used today.

The two dominant HDLs are Verilog<sup>®</sup> and VHDL. Both are entered using a text editor such as *vi* on a UNIX<sup>®</sup>-based workstation. Verilog and VHDL are languages much like programming languages, such as C or Pascal, but they have been designed specifically for describing hardware behavior. Verilog and VHDL are functionally equivalent. The choice of one over the other is driven primarily by the experience base of the design group, the tool set available to the designers to process the HDL, and, possibly, by organizational dictates, such as those of the US government, which requires that all designs be written in VHDL. Verilog dominates the US merchant ASIC market, whereas VHDL prevails in Europe, the US government, and some large US companies such as IBM.

HDLs allow designers to describe the function of their designs at a high level, often independent of the eventual implementation in silicon, much as a programmer can describe a function in the C language without knowing the specific compiler that will create the executable object code.

With schematic capture, graphical representations of the logic functions are placed on a computer screen and are manually connected by the designer. Schematic capture requires the designer to enter a much lower-level description of the design, implemented directly in the logic circuits available from the ASIC vendor, thereby sacrificing the flexibility of the higher-level description possible with HDLs. Schematic capture may still prevail for some time with very small ASICs (10–40k gates) or those containing analog functions. With the average size of an ASIC in the United States in 1996 exceeding 100k gates, the vast majority of customers will be using VHDL or Verilog as their design entry vehicle. (*Dataquest*).

### Design Entry Examples

The following sections provide a brief look at some examples of HDL and a simple schematic.

#### Sample High-Level Hardware Description Language (HDL)

Figure 2 on page 5 contains a portion of a direct memory access (DMA) controller written in two different HDLs: VHDL and Verilog. Notice that though there are syntactical differences between the two languages (for example, VHDL's "entity DMA1..." versus Verilog's "module DMA1..."), the types of language statements and level of description are essentially equivalent. Both HDLs have execution control statements based on the state of a signal called CLK, and both propagate certain design values based on the status of CLK. The language statements are independent of any particular ASIC vendor's library and are at a level of abstraction above any particular logic circuit implementation; for example, such statements might be at a behavioral level or register transfer language (RTL) level. Whatever the level, an HDL can be implemented in several different ways, using different combinations of circuits from any one of a number of different ASIC vendors' libraries.

#### Sample Schematic

Figure 2 contrasts sharply with Figure 3 on page 5, which provides a schematic representation that is directly mapped into the logic circuits in an ASIC vendor's library. The schematic assembles circuits such as NOR3, AND2 and INVERT and includes explicit connections between inputs and outputs. The logic circuit implementation for this function is completely defined. Because the vast majority of ASIC designs

## ASIC Design Methodology Primer

done at IBM begin with an HDL description rather than schematic entry, this paper focuses primarily on HDL in the analysis phase.

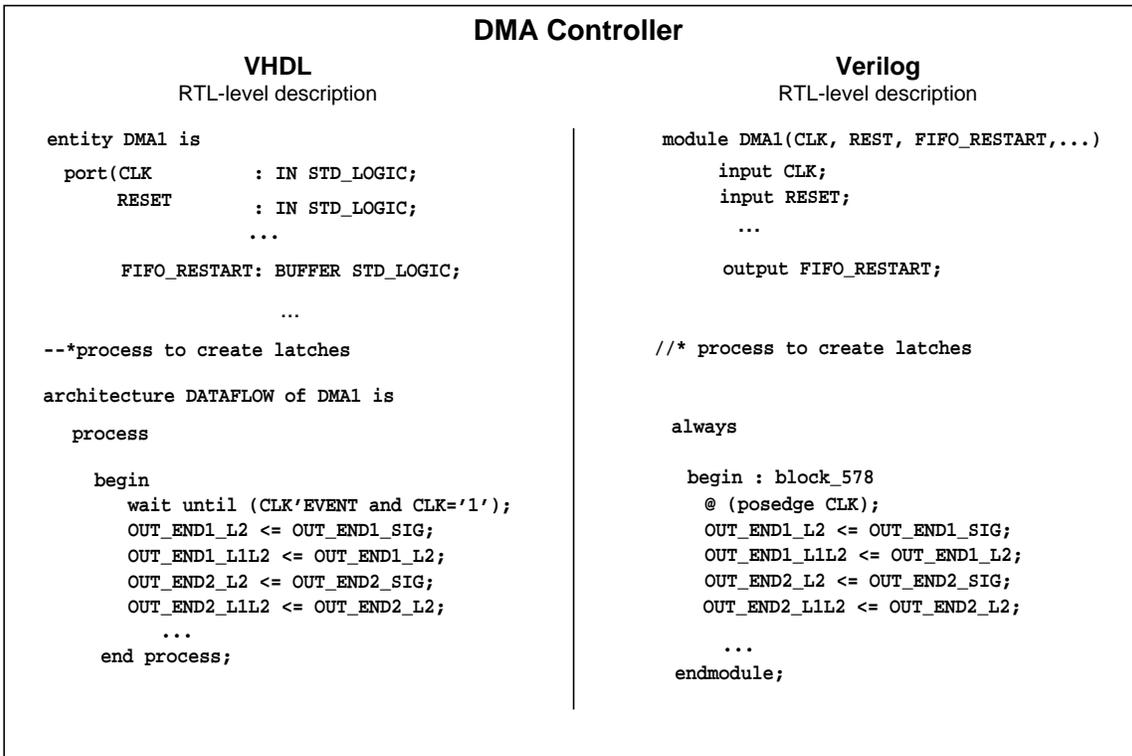


Figure 2. DMA Controller with Two Different HDLs

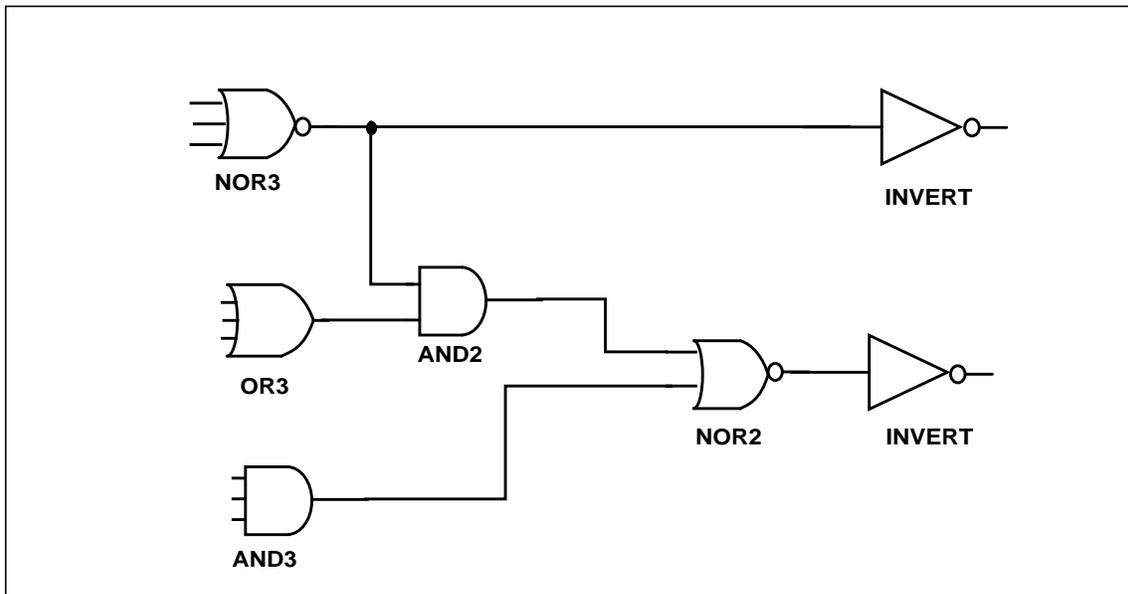


Figure 3. Schematic Representation of Logic Circuits in an ASIC Library

## ASIC Design Methodology Primer

### Design Analysis

After entering a design in an HDL, the designer begins the process of analyzing what was entered to determine if it correctly implements the intended function. The traditional method is through **simulation**, which evaluates how a design behaves. Simulation is a mature, well-understood process, and there are many simulators available that accept HDLs written in VHDL, Verilog, or increasingly, both languages. IBM ASICs supports many different simulators available from CAD vendors, such as Verilog-XL™ and Leapfrog™ from Cadence; VSS™ from Synopsys; and MTI™ from Model Technology, Inc.

A more recent addition to the design analysis phase is **power analysis**, with many new CAD tools coming to market in the last year. For a growing number of customers, the power consumption and dissipation of their designs are becoming critical factors. Early feedback on the power requirements of a design allows designers to make timely basic design trade-offs in order to achieve power targets. Because this analysis is at the architectural level and is technology-independent, the estimates may not be extremely accurate and may vary as much as 50% from the actual silicon implementation.

### Simulation

Figure 4 represents the traditional simulation process. The VHDL or Verilog, which describes the design function, is read into the simulator tool along with a set of **input vectors** created by the designer. The simulator generates **output vectors** that are captured and evaluated against a set of expected values. If the output values match the expected values, then the simulation passes; if the output values differ, then the simulation is said to fail and the design needs to be corrected. Most simulators generate output in two forms: numerically, as 0's and 1's in a file for comparison purposes, and graphically, as waveforms that depict the transition of signals from 0 to 1 and vice-versa.

Note that the simulation at this level is technology-independent. There is usually little or no technology-specific information delivered by an ASIC vendor to support simulation at this phase. Exceptions include high-level behavioral models for large macros such as RAMs, ROMs, or complex cores.

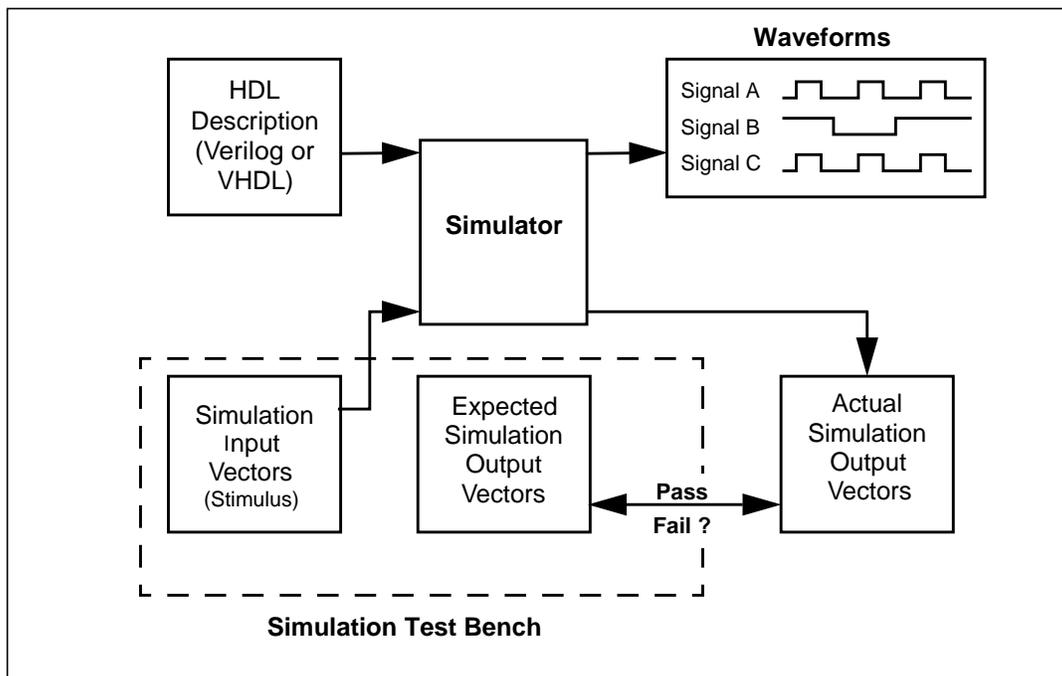


Figure 4. Traditional Simulation Process

## ASIC Design Methodology Primer

### Technology Optimization

Technology optimization takes a technology-independent description of a design, and maps it to a library of logic circuits provided by an ASIC vendor, thereby making the design technology-dependent. This phase seeks not just a correct mapping, but the most efficient one in terms of the customer requirements. The optimization process is divided into subprocesses: logic synthesis; test insertion; clock planning and insertion; and floorplanning.

### Logic Synthesis

Logic synthesis is the basic step that transforms the HDL representation of a design into technology-specific logic circuits. An ASIC vendor provides the logic circuits in a form called a “synthesis library”. As the synthesis tool breaks down high-level HDL statements into more primitive functions, it searches this library to find a match between the functions required and those provided in the library. When a match is found, the synthesis tool copies the function into the design (instantiates the circuit) and gives it a unique name (cell instance name). This process continues until all statements are broken down and mapped (synthesized) to logic circuits. There are potentially hundreds, or even thousands, of different combinations of logic circuits that can implement the same logical function. The combination chosen by a synthesis tool is determined by the synthesis constraints provided by the designer. These constraints define the design’s performance, power, and area targets. A design driven primarily by performance criteria may use larger, faster circuits than one driven to minimize area or power consumption. Synthesis has matured over the past 5–8 years in the merchant market and is used in virtually all ASIC design starts today.

The inputs to the logic synthesis process are the HDL design description (VHDL or Verilog), the design constraints, and the synthesis library provided by the ASIC vendor. The output of the synthesis process is a list of circuit instances interconnected in a manner that implements the logical function of the design. This list of interconnected circuit instances is called a **netlist** and can be written in several different formats or languages. The dominant netlist languages are VHDL, Verilog, and Electronic Design Interchange Format (EDIF). The interconnected circuits may also be graphically represented as schematics.

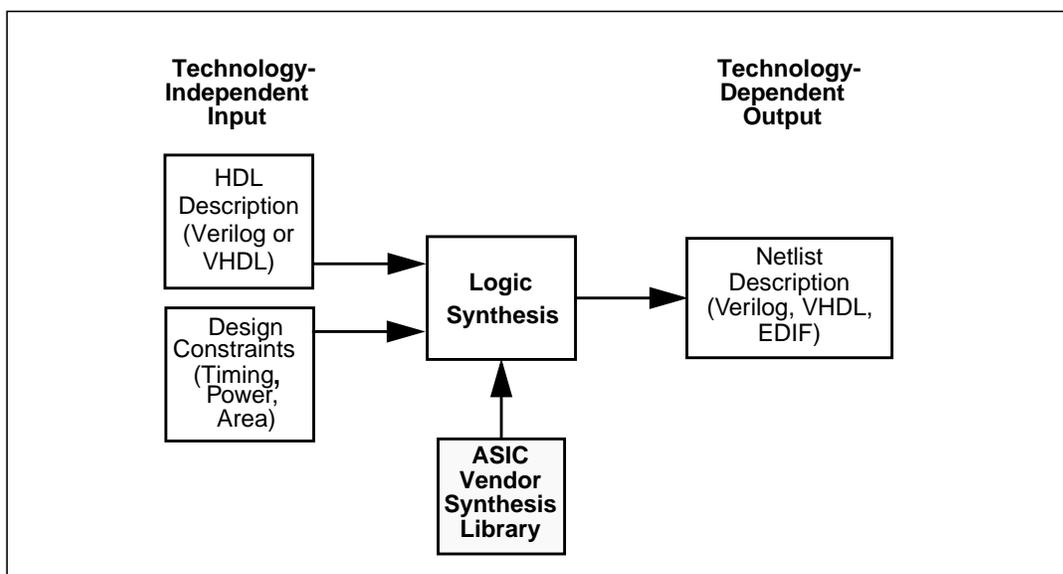


Figure 5. Logic Synthesis Process

The most popular synthesis tool in the external market, accounting for about 85% of the total synthesis


## ASIC Design Methodology Primer

---

seats, is Design Compiler™ by Synopsys. At IBM, IBM's BooleDozer™ is the tool of choice, accounting for approximately 90% of the internal synthesis seats.

### Sample Synthesis Workflow

The next four figures depict the synthesis process. Figure 6 provides an overview of the process and indexes the three figures which follow it.

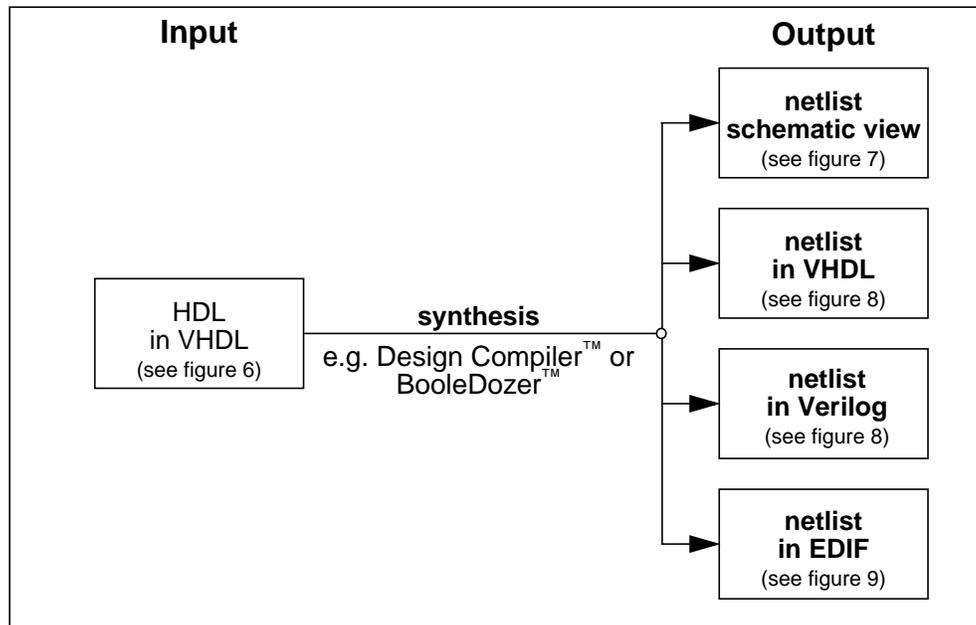

**Figure 6. Synthesis Process with Various Possible Outputs**

## ASIC Design Methodology Primer

The HDL design description (in VHDL) shown below in Figure 7 is a technology-independent description of a counter function called **refctr**. Take note of the statements in the dotted box that assign the value of a signal **s\_load** to a signal **s\_ref\_ctr\_out** based on the status of **CLK**.

```
entity refctr is
  port (COUNT: in  std_ulogic_vector(5 downto 0);
        CLK: in std_ulogic;
        RESET: out std_ulogic);
  ....

architecture refctr_rtl of refctr is
  signal s_ref_ctr_out  : std_ulogic;
  signal s_load         : std_ulogic;
  s_next_ctr_val       : std_ulogic_vector(5 downto 0);
  s_counter_input      : std_ulogic_vector(5 downto 0);
  s_counter_output     : std_ulogic_vector(5 downto 0);
  s_reset              : std_ulogic_vector(5 downto 0);

begin
  s_reset(0) <= RESET;
  ....
  process(CLK)
  begin
    if (CLK = '1') and (not CLK'stable) then
      s_counter_output <= s_counter_input and not s_reset;
      s_ref_ctr_out <= s_load;
    end if;
  end process;
  ....
end refctr_rtl;
```

Figure 7. Technology-Independent VHDL Source

## ASIC Design Methodology Primer

### Schematic View of refctr

Figure 8 depicts a post-synthesis schematic view of a section of **refctr**. Notice that the design was mapped to specific logic circuit functions, such as **INVERT\_A**, **NOR3\_4** and **D\_F\_LPH0001\_4**. These names correspond to circuit names found in the *IBM ASIC CMOS 5S Databook*, SA14-2203-03. Each circuit has a unique name, such as **U7** for one instance of **NOR3\_4**, and **U8** for another instance of **NOR3\_4**. The instance names **U7** and **U8** were generated by the synthesis tool as it mapped the HDL function into logic circuits such as **NOR3\_4**.

Signals generated by the synthesis tool as it mapped the HDL to logic circuits appear with names such as **n275** and **n276**. Signal names explicitly named in the HDL, such as **load** and **CLK**, are retained. Notice that **load** and **CLK** feed into a circuit that generates the signal **s\_ref\_ctr\_out**, as described in the technology-independent source on the previous page (Figure 7).

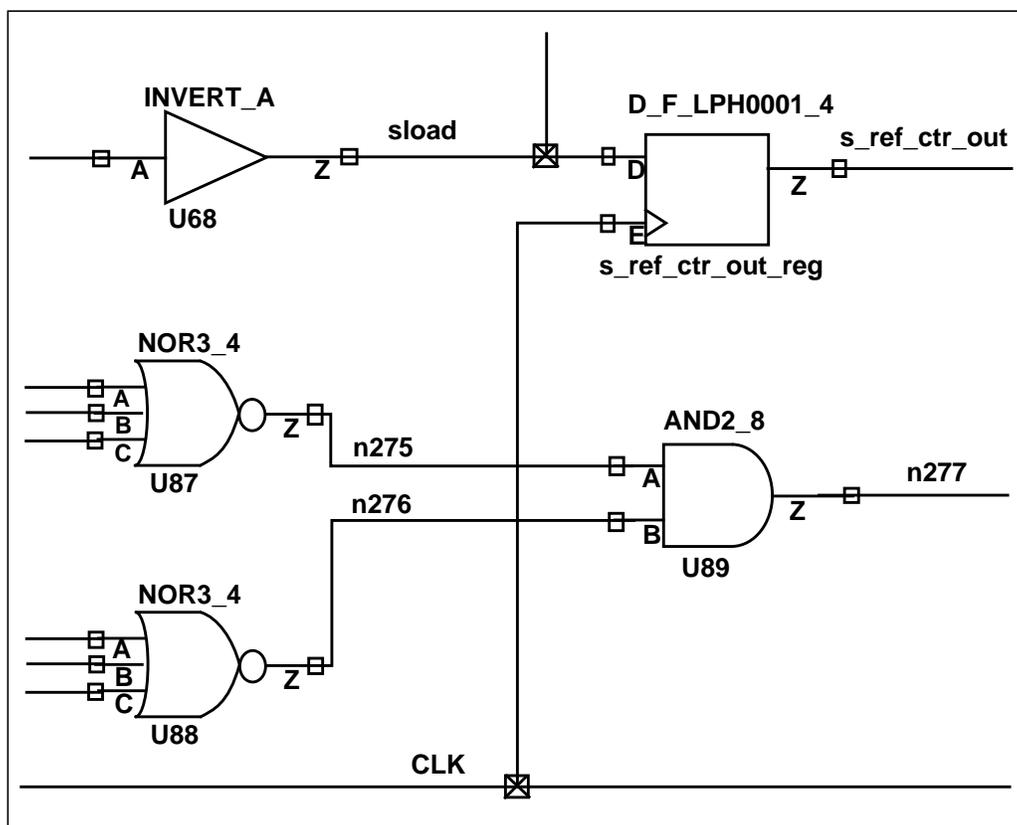


Figure 8. Netlist Schematic View of refctr

## ASIC Design Methodology Primer

### Netlist Gate-Level View of refctr (VHDL, Verilog)

Figure 9 contains the post-synthesis netlist of **refctr**, output in both VHDL and Verilog. The circuits described, along with net names and instance names are exactly the same. The difference is in the syntax of the description.

VHDL	Verilog
<pre> entity refctr is     ... architecture SYN_refctr_rtl of refctr is     ...      component INVERT_A         port(Z : out std_logic; A : in std_logic);     end component;      component NOR3_4         port(Z : out std_logic; A, B, C : in std_logic);     end component;      component AND2_8         port(Z : out std_logic; A, B : in std_logic);     end component;      component D_F_LPH0001_4         port(L2 : out std_logic; D, E : in std_logic);     end component;  begin ...      U68 : INVERT_A port map (Z =&gt; s_load, A =&gt; n265);     U87 : NOR3_4 port map (Z =&gt; n275, A =&gt; COUNT(3),         B =&gt; COUNT(4), C =&gt; COUNT(0));      U88 : NOR3_4 port map (Z =&gt; n276, A =&gt; COUNTb(5),         B =&gt; COUNT(2), C =&gt; COUNT(1));      s_ref_ctr_out_reg : D_F_LPH0001_4 port map (L2 =&gt;         s_ref_ctr_out, D =&gt; s_load, E =&gt; CLK);  end SYN_refctr_rtl;                 </pre>	<pre> module refctr (COUNT, CLK, RESET, REF);     ...      INVERT_A U68 (.Z(s_load), .A(n265) );      NOR_4 U87 (.Z(n275), .A(COUNT[3]),         .B(COUNT[4]), .C(COUNT[0]) );      NOR3_4 U88 (.Z(n276), .A(COUNT[5]),         .B(COUNT[2]),.C(COUNT[1]) );      AND2_8 U89 (.Z(n277),.A(n275),         .B(n276) );      D_F_LPH0001_4 s_ref_ctr_out_reg(         .L2(s_ref_ctr_out), .D(s_load), .E(CLK));      ... endmodule;                 </pre>

Figure 9. Gate-Level Netlist View of refctr - VHDL/Verilog

## ASIC Design Methodology Primer

### Netlist Gate-Level View of refctr (EDIF)

The EDIF version of the netlist also contains the exact same information as the schematic, VHDL and Verilog versions in terms of the circuits and their connectivity. The difference is, again, syntactical. EDIF is also more verbose than either VHDL or Verilog, and the data volume of an EDIF netlist is a drawback; nonetheless, EDIF is an industry standard and is accepted by almost every electronic design automation (EDA) tool on the market.

EDIF	EDIF (continued)
<pre>(cell refctr (cellType GENERIC)   ... (contents   (instance U68     (viewRef Netlist_representation       (cellRef INVERT_A(libraryRef IBMCOS5S_SC))     )   )   (instance U87     (viewRef Netlist_representation       (cellRef NOR3_4(libraryRef IBMCOS5S_SC))     )   )   (instance U88     (viewRef Netlist_representation       (cellRef NOR3_4(libraryRef IBMCOS5S_SC))     )   )   (instance U89     (viewRef Netlist_representation       (cellRef AND2_8 (libraryRef IBMCOS5S_SC))     )   )   (instance s_ref_ctr_out_reg     (viewRef Netlist_representation       (cellRef D_F_LPH0001_4         (libraryRef IBMCOS5S_SC))     )   ) )</pre>	<pre>(net s_load   (joined (portRef A (instanceRef U74))     (portRef D (instanceRef s_ref_ctr_out_reg))     (portRef Z (instanceRef U68))   ) ) (net CLK   (joined (portRef CLK)(portRef E (instanceRef     (s_ref_ctr_out_reg))     (portRef E (instanceRef s_counter_output_....       ...     (net s_ref_ctr_out       (joined (portRef D0 (instanceRef U90))         (portRef L2 (instanceRef s_ref_ctr_out_reg))       )     )   ) ) (net 275   (joined (portRef A (instanceRef U89)) (portRef Z     (instanceRef U87))) ) (net 276   (joined (portRef B (instanceRef U89)) (portRef Z     (instanceRef U88))) ) (net 277   (joined (portRef SD instanceRef u90)) (portRef Z     (instanceRef U89))) ) ))))</pre>

Figure 10. Gate-Level Netlist View of refctr - EDIF

### Test Insertion

Test insertion, the step following logic synthesis, consists of inserting structures into the design to enable a complete and efficient manufacturing test. The IBM ASIC methodology requires that the test structures be inserted in a manner that is compliant with IBM's full-scan design-for-test (DFT) methodology. IBM is a recognized industry leader in DFT, and its incorporation into IBM ASIC flow is an important market differentiator. Compliance with the methodology offers customers significant advantages, such as high-quality test coverage (greater than 99% on average) and automatically-generated test patterns.

## ASIC Design Methodology Primer

The design output by the logic synthesis phase is not automatically compliant with IBM's full-scan DFT. The sequential storage elements that the synthesis tool can select automatically from an ASIC vendor's library is limited to a flip-flop element that is not scan-based. The test insertion process replaces the non-scannable flip-flop with a scannable element from the IBM ASIC library, and then generates and connects the appropriate scan and test clocks. Figure 11 below depicts this insertion process.

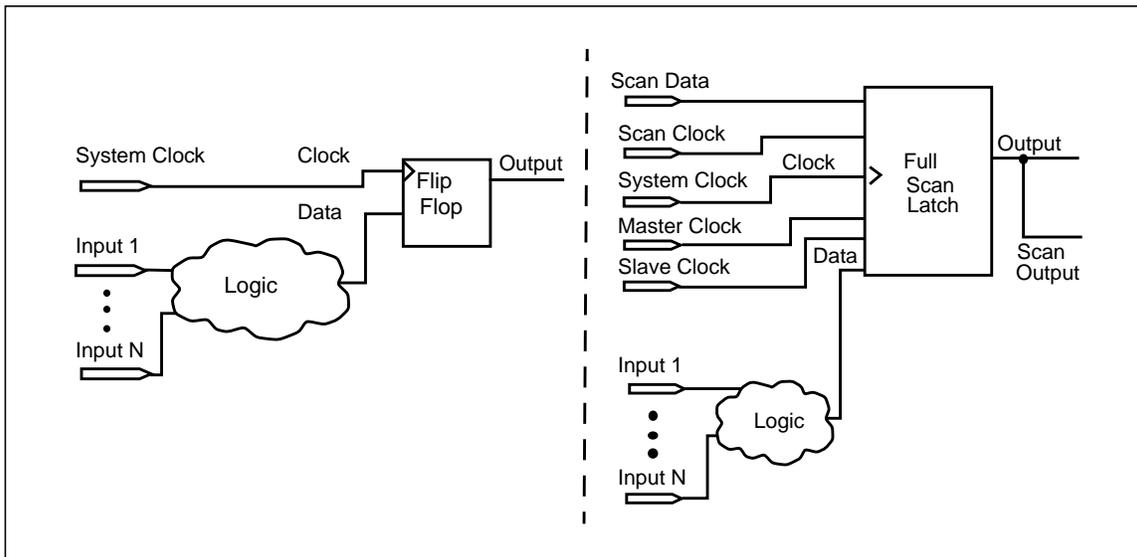


Figure 11. Test Insertion

### Clock Planning and Insertion

The last phase of the technology optimization process is the planning and insertion of the **clock network**. Every ASIC design has at least one clock; many of the large and more complex ASIC designs have multiple clocks, in some cases, twenty or more. The manner in which the clock network is propagated throughout the design to the clocked circuits (such as latches, flip-flops and other logic circuits that need to be synchronized with the clock signal), can vary from vendor to vendor, and involves trade-offs amongst various design parameters:

- die area;
- delay through the clock network to the clocked circuits (**latency**);
- the variation in clock arrival time at the various clocked elements (**skew**); and,
- the power generated by the clock network as it switches.

The clocking methodology must comply with the DFT requirements in order to maintain the testability of the design.

IBM uses a **clock tree** or **repowering tree** method to propagate a clock signal to the hundreds, thousands, or tens of thousands of logic circuits that receive that clock signal. Before clock tree insertion, a design is said to have **idealized clocks**, meaning that all logic circuits receiving a given clock signal are driven in parallel from a single clock driver circuit. However, there are significant barriers to actually implementing a single circuit directly driving thousands of other circuits; these barriers include: routability; required circuit drive strength; management of clock latency and skew; and others. IBM's ClockPro tool allows a customer to input information on the characteristics and constraints for each clock network on the die. ClockPro automatically generates multiple valid clock trees, or levels of repowering circuitry, for